

# Temperature and differential pressure transmitter


# CP 210-R

## KEY POINTS

- Range from -100/+100 Pa to -10 000/+10 000 mbar (according to model, see "Part number")
- Input Pt100 on terminal block for temperature measurement, range from -100 to +400°C (probes as option)
- Configurable intermediate ranges
- Two 4-wire analogue output 0-5/10 V or 0/4-20 mA
- Power supply 24 Vdc/Vac or 100-240 Vac
- Trend indicator
- ABS V0 housing, IP65, with or without display
- "¼ turn" system mounting with wall-mount plate
- Solenoid valve for auto-calibration (only on CP211 and CP212 models)
- 2 relay outputs



## FEATURES OF THE HOUSING

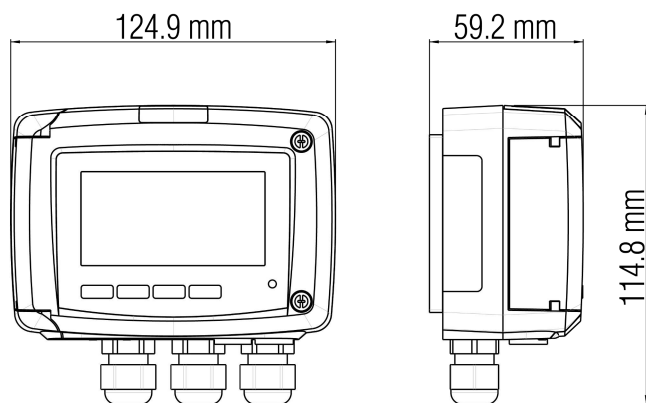

**Material:** ABS V0 as per UL94

**Protection:** IP65

**Display:** 75 x 40 mm, LCD 19 digits 2 lines.

**Height of digits:** Values: 10 mm; Units: 5 mm

**Connection:** Ribbed Ø6.2 mm (CP211/212/213)


**Pass-through:** for cables Ø6 mm maximum

**Cable gland:** for cables Ø8 mm maximum

**Weight:** 340 g

## PART NUMBER

To order, just add the codes to complete the part number:

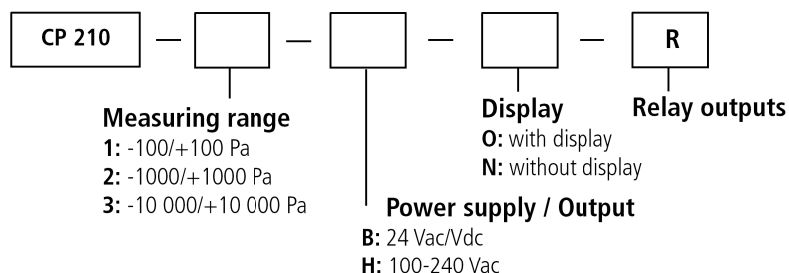

**Example: CP 211 – HO – R**


 
Pressure transmitter -100/+100 Pa measuring range, with 100-240 Vac power supply, with display and relay outputs.

## TECHNICAL FEATURES

Units of measurement	CP211/212/213: Pa, mmH <sub>2</sub> O, mbar, inWG, mmHG, daPa, kPa, hPa CP211/212/213 (temperature Pt100): °C / °F
Accuracy*	CP211/212: ±0.5% of reading ±2 Pa; CP213: ±0.5% of reading ±10 Pa CP211/212/213 (Pt100 temperature): ±0.5% of reading ±0.5°C
Response time	1/e (63%) 0.3 s
Resolution	CP211/212: 1 Pa; 0.1 mmH <sub>2</sub> O; 0.01 mbar; 0.01 inWG; 0.01 mmHG; 0.1 daPa; 0.001 kPa; 0.01 hPa CP213: 1 Pa; 0.1 mmH <sub>2</sub> O; 0.01 mbar; 0.01 inWG; 0.01 mmHG; 0.1 daPa; 0.01 kPa; 0.01 hPa
Tolerated overpressure	CP211/212: 21 000 Pa – CP213: 69 000 Pa

*\*All the accuracies indicated in this technical datasheet were stated in laboratory conditions, and can be guaranteed for measurements carried out in the same conditions, or carried out with calibration compensation.*

## TECHNICAL SPECIFICATIONS

<b>Power supply</b>	24 Vac / Vdc $\pm 10\%$ 100-240 Vac, 50-60 Hz <b>Warning: risk of electric shock</b> 
<b>Output</b>	2 x 4-20 mA or 2 x 0-20 mA or 2 x 0-5 V or 2 x 0-10 V (4 wires) Common mode voltage <30 VAC Maximum load: 500 Ohms (0/4-20 mA) / Minimum load: 1 K Ohms (0-5/10 V)
<b>Relay outputs</b>	2 changeover relays 3 A / 230 V
<b>Galvanic isolation</b>	Inputs and outputs (100-240 Vac models) Device fully protected by DOUBLE ISOLATION or REINFORCED ISOLATION  Outputs (24 Vac/Vdc models)
<b>Consumption</b>	CP210-B: 6 VA CP210-H: 8 VA
<b>European directives</b>	2014/30/EU EMC; 2014/35/EU Low Voltage; 2011/65/EU RoHS II; 2012/19/EU WEEE
<b>Electrical connection</b>	Screw terminal block for cables 2.5 mm <sup>2</sup> . Carried out according to the code of good practice
<b>PC communication</b>	USB-Mini Din cable
<b>Environment</b>	Air and neutral gases
<b>Autozero</b>	Manual by push-button; Automatic by solenoid valve (only CP211/CP212)
<b>Type of fluid</b>	Air and neutral gases
<b>Conditions of use (°C/%RH/m)</b>	From -10 to +50°C. In non-condensing condition. From 0 to 2000 m.
<b>Storage temperature</b>	From -10 to +70°C
<b>Security</b>	Protection class II; Pollution degree 2; Overvoltage category 2 (OVCII)

## CONFIGURABLE INTERMEDIATE OR CENTER ZERO RANGES

Transmitter	Pressure range	Air velocity range*
<b>CP211</b>	-100/+100 Pa	From 3 to 10 m/s
<b>CP212</b>	-1000/+1000 Pa	From 3 to 30 m/s
<b>CP213</b>	-10 000/+10 000 Pa	From 3 to 100 m/s

\*These air velocity ranges are given for information, based on a Debimo differential probe ( $C_m = 0.81$ ) and do not take into account temperature compensation.

## AIR FLOW AND AIR VELOCITY FUNCTION (option)

Class 210 transmitters have 2 analogue outputs that correspond to both displayed parameters. It is possible to activate one or two outputs and select for each output between pressure, air velocity and air flow (functions as option).

Linked to a differential pressure device (Debimo blade, Pitot tube, orifice plate, ...), they can be equipped as option with the SQR 3 function (square root function) allowing to calculate the air velocity and/or air flow in a duct from a differential pressure.

<i>Functions</i> <b>Features</b>	<b>Measuring ranges</b>	<b>Units and resolutions</b>
<b>Air velocity*</b>	From 3 to 100 m/s (according to model)	0.1 m/s – 0.1 fpm
<b>Air flow*</b>	From 0 to 99 999 dam <sup>3</sup> /h (according to air velocity and section)	1m <sup>3</sup> /h – 0.1 m <sup>3</sup> /s – 1 dam <sup>3</sup> /h 0.1l/s – 1 cfm

\*Differential pressure device (Pitot tube, Debimo...) as option

• **Air velocity calculation** :  $V = C_M \sqrt{\frac{2 \Delta P}{\rho}}$

With:

$C_M$ : differential pressure device coefficient

- Pitot tube type L:  $C_M = 1.0015$

- Pitot tube type S:  $C_M = 0.84$

- Debimo blade:  $C_M = 0.8165$

$\Theta$ : given temperature (°C)

$P_o$ : given atmospheric pressure (Pa)

$$\rho = \frac{P_o}{287.1 \times (\Theta + 273.15)}$$



• **Air flow calculation**: air flow (m<sup>3</sup>/h) = air velocity (m/s) x surface (m<sup>2</sup>) x 3600

**Surface**: setting of duct type (rectangular or circular) and duct size (mm or inch).

## INTEGRATION OF PRESSURE MEASUREMENT




The pressure measurement element is very sensitive and reacts to pressure changes. When making measurements in unstable air movement conditions, the pressure measurement may fluctuate. The integration coefficient (from 0 to 9) makes an average of the measurements and then helps avoid any excessive variations; it guarantees a stable measurement.

## CONNECTIONS

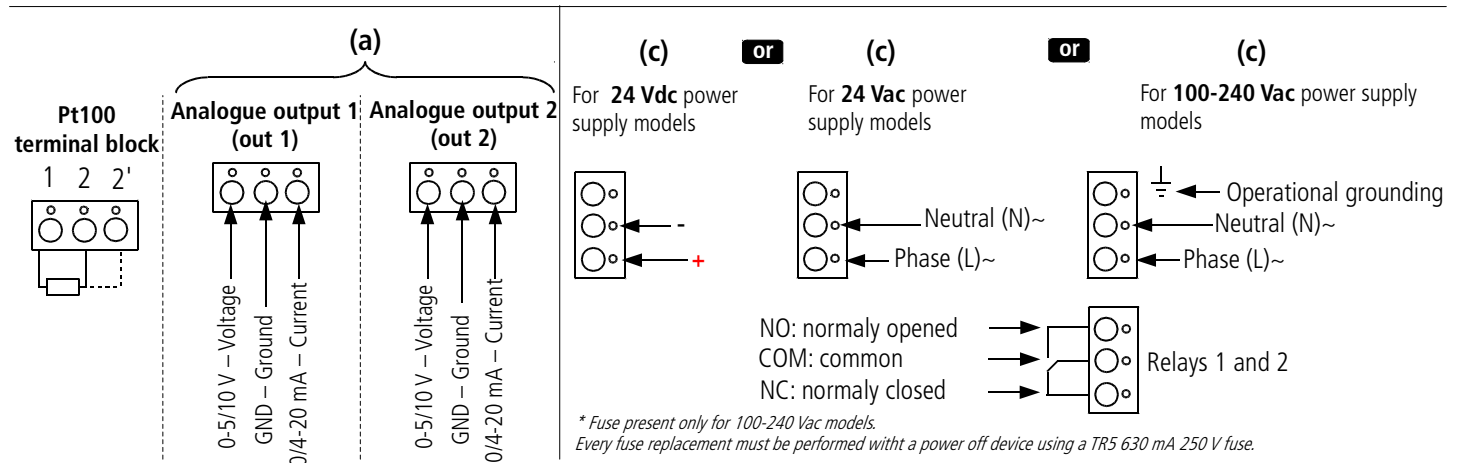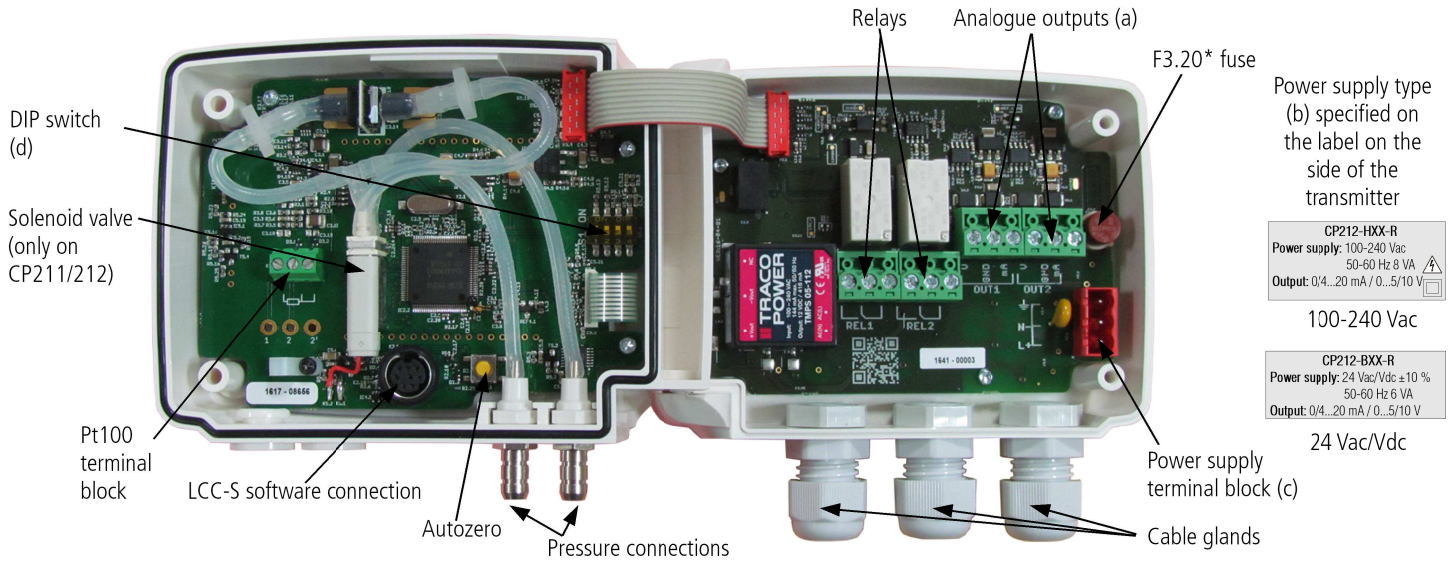

## ELECTRICAL CONNECTIONS – as per NFC15-100 standard


**Warning:** This connection must be made by a formed and qualified technician. To make the connection, the transmitter must not be energized. Before making the connection, you must first check the power supply indicated on the transmitter board (see (b) on "Connections" part). The presence of a switch and a circuit breaker upstream the device is compulsory.

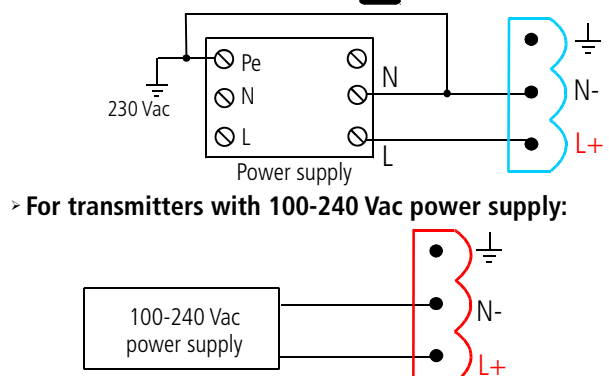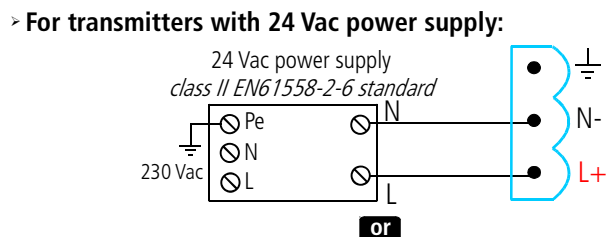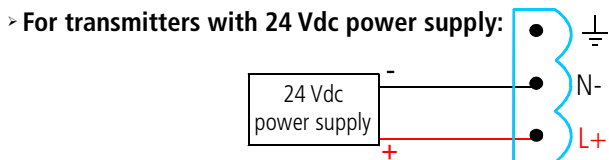


The selection of the output signal in voltage (0-10 V or 0-5 V) or in current (4-20 mA or 0-20 mA) is made via the DIP switch (d) of the electronic board of the transmitter: put the on-of switches as shown in the table below:

Configurations	4-20 mA	0-10 V	0-5 V	0-20 mA
Combinations				
	1 2 3 4	1 2 3 4	1 2 3 4	1 2 3 4

> Connection of the output in current 4-20 mA:

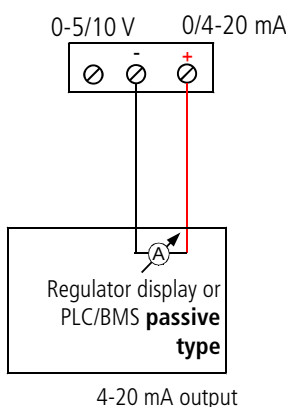

> Connection of output in voltage 0-10 V:

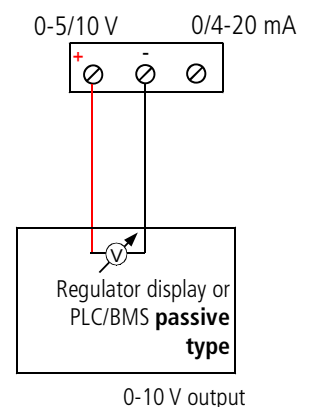

**Warning:** On 100-240 Vac models, if a fuse protection is used for the power line, it is imperative to use delayed-action fuses in order to absorb the surge of current when first turned on the transmitter.

## AUTOZERO

### Auto-calibration

CP210 transmitters have a temperature compensation of the gain from 0 to 50°C and an auto-calibration process that guarantees over the time an excellent stability and a perfect reliability of the measurement on low and high ranges.

Auto-calibration principle: the microprocessor of the transmitter drives a solenoid valve that compensates the possible drifts on the sensitive element over the time. The compensation is performed by the permanent adjustment of the zero. So the measurement of the differential pressure is then independent from the environmental conditions of the transmitter.

**Advantage:** no drift

**Frequency of auto-calibration:** resetable or from 1 to 60 minutes

### Autozero

To perform an autozero, unplug the 2 pressure connections tubes and press the **"Autozero"** key.

On CP211 and CP 212 transmitters, it is not necessary to unplug the 2 pressure connection tubes.

When an autozero has been performed, **"On"** green light turns off then turns on, and on transmitters equipped with a display, **"autoZ"** is displayed.

## CONFIGURATION OF THE TRANSMITTERS

It is possible on the class 210 to configure all the parameters managed by the transmitter : units, measuring ranges, outputs, channels, calculation functions, etc, via different methods:


- **Keypad** for models with display : a code-locking system allows to secure the installation (See class 210 user manual).
- **Software** (optional) on all models. Simple user-friendly configuration. See LCC-SD user manual.

### Configurable analogue output:

Range with central zero (-50/0/+50 Pa), with offset zero (-300/0/+70 Pa) or standard range (0/+100 Pa), it is possible to configure your own intermediate ranges.

**Caution: the minimum difference between the high range and the low range is 20.**

Configure the range according to your needs: outputs are automatically adjusted to the new measuring range

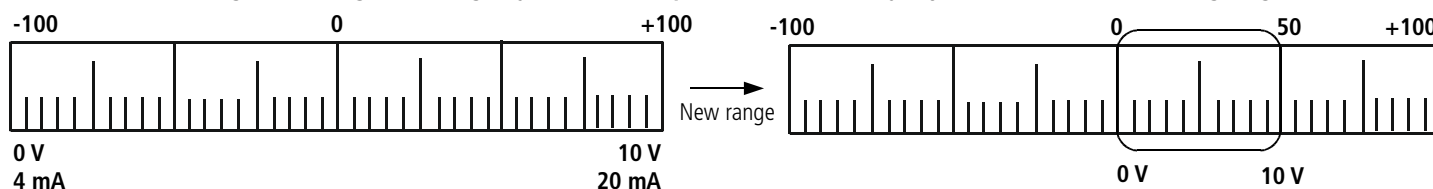

## MOUNTING

To mount the transmitter, mount the ABS plate on the wall (drilling: Ø6 mm, screws and pins are supplied).

Insert the transmitter on the fixing plate (see A on the drawing beside). Rotate the housing in clockwise direction until you hear a "click" which confirms that the transmitter is correctly installed.



Once the transmitter is installed and powered up, please make an autozero to guarantee the correct working of the transmitter in any position.

## CALIBRATION

**Outputs diagnostic:** With this function, you can check with a multimeter (or on a regulator / display, or a PLC / BMS) if the transmitter outputs work properly. The transmitter generates a voltage of 0 V, 5 V and 10 V or a current of 4 mA, 12 mA and 20 mA

**Certificate:** Class 210 transmitters are supplied with adjusting certificates. Calibration certificates are available as an option.

## MAINTENANCE

Please avoid any aggressive solvent. Please protect the transmitter and its probes from any cleaning product containing formalin, that may be used for cleaning rooms or ducts.

## OPTIONS AND ACCESSORIES

- **LCC-S:** configuration software with USB cable
- **SQR/3 function** (square root for the measurement of air velocity and air flow)
- **Calibration certificate**

- Connection tube
- Connection fittings
- Through-connections
- Straight connections
- Spherical coupling nut



Only the accessories supplied with the device must be used.

## PRECAUTIONS FOR USE

Please always use the device in accordance with its intended use and within parameters described in the technical features in order not to compromise the protection ensured by the device.



Once returned to KIMO, required waste collection will be assured in the respect of the environment in accordance with European guidelines relating to WEEE.

# 大華高科股份有限公司

[www.taiwah.com.tw](http://www.taiwah.com.tw) [info@taiwah.com.tw](mailto:info@taiwah.com.tw)

台北 TEL: (02) 2592 - 5119 Fax: (02) 2592- 3577

台中 TEL: (04) 2707 - 2269 Fax: (04) 2707- 1799

台南 TEL: (06) 243 - 2338 Fax: (06) 243 - 2339

KIMO® 為 KIMO 儀器公司的註冊商標。

資料中任何商標和圖片為本公司版權所有。未經本公司書面許可不得以任何形式複製、轉印、發行或儲存資料中所包含的訊息。

本資料如有變更，恕不另行通知。