# KISTOCK DATALOGGER
# KT 320 / KTT 320

CE

## Temperature / Humidity / Voltage/ Current / Impulsion

## KEY POINTS

- Software for configuration and data visualisation freely downloadable
- Software for configuration and data processing available in option
- Safety lock wall mount with inviolability system
- Storage capacity of 2 000 000 points
- Fast data downloading: 18 000 points/s
- Up to 5 recordable parameters simultaneously
- 2 configurable setpoint alarms for each channel
- 2 lines LCD screen
- Bluetooth® communication for smartphones and tablets (Android and IOS)
- Magnetic mounting



## REFERENCES

| Device reference | Display | Internal sensor | | External sensor | | Parameters | Number of record points |
| --- | --- | --- | --- | --- | --- | --- | --- |
| | | Number | Type | Number | Type | | |
| KT 320 | Yes | 1 | Temperature | 2 | Input for SMART PLUG* probes | Temperature, humidity, current, voltage, impulsion | 2 000 000 |
| KTT 320 | | - | | 4 | Input for thermocouple probes | Temperature | |

ℹ️ For a fast measurement of temperature and humidity variations, it is better to use a remote probe (KITHA, KITHP-130 or KITHI-150 probe, see page 4).

## HOUSING

**Dimensions**
110.2 x 79 x 35.4 mm

**Weight**
KT 320: 206 g
KTT 320: 200 g

**Display**
2 lines LCD screen
Dimensions of screen: 49.5 x 45 mm
2 indication LEDs (red and green)

**Control**
1 OK key
1 Selection key

**Material**
Compatible with food industry environment
ABS housing

**Battery power supply**
2 lithium double AA 3.6 V batteries

**Protection**
IP 65: KT 320
IP 54: KTT 320**

**PC communication**
1 micro-USB input

**Environmental conditions of use**
Air and neutral gases
Hygrometry: in non condensing conditions
Maximum altitude: 2000 m

*Input which allows to plug different compatible SMART PLUG probes: see optional probes and cables page 5.*
**With all thermocouple probes connected.*

## TECHNICAL FEATURES

| | KT 320 | KTT 320 |
|---|---|---|
| **Parameter** | Temperature, humidity, current, voltage, impulsion | Temperature |
| **Units displayed[1]** | °C, °F, °Ctd, °Ftd, %RH, mV, V, mA, A <br> Underline{Programmed units}: please see the **class 320 KISTOCK** user manual. <br> Underline{Free units}: for the free units creation, please see the **KILOG** software user manual. | °C, °F |
| **Resolution** | 0.1°C, 0.1°F, 0.1 %RH, 1 mV, 0.001 V, 0.001 mA, 0.1 A | 0.1°C, 0.1°F |
| **External input** | Micro-USB female connector | |
| **Input for probe** | 2 SMART PLUG[2] inputs | 4 inputs for thermocouple probes (K, J, T, N, S) |
| **Internal sensor** | Temperature | - |
| **Type of sensor** | NTC | Thermocouple |
| **Measuring range** | Measuring range of the internal sensor[3]: From -40 to +70°C | K: from -200 to +1300°C <br> J: from -100 to +750°C <br> T: from -200 to +400°C <br> N: from -200 to +1300°C <br> S: from 0 to 1760°C |
| **Accuracies[4]** | ±0.4°C from -20 to 70°C <br> ±0.8°C below -20°C | K, J, T, N: ±0.4°C from 0 to 1300°C <br> ±(0.3% of the reading +0.4°C) below 0°C <br> S: ±0.6°C |
| **Setpoints alarms** | 2 setpoint alarms on each channel | |
| **Frequency of measurement** | From 1 second to 24 hours | |
| **Operating temperature\*** | From -40 to +70°C | From -20 to 70°C |
| **Storage temperature** | From -40 to +85°C | |
| **Battery life** | 7 years[5] | |
| **European directives** | 2011/65/EU RoHS II ; 2012/19/EU WEEE ; 2014/30/EU EMC ; 2014/35/EU | |

[1] *Some units are available only with optional probes.*
[2] *Input which allows to plug different compatible probes: see optional probes and cables page 3.*
[3] *Other measuring ranges are available according to the connected probe: see optional probes and cables page 3.*
[4] *All accuracies indicated in this document were stated in laboratory conditions and can be guaranteed for measurement carried out in the same conditions, or carried out with calibration compensation.*
[5] *On the basis of 1 measurement each 15 minutes at 25°C.,*
*\*The screen can be hard to read, and its display speed often slows down at temperatures lower than 0°C. This has no effect on the accuracy of measurements.*

## CONNECTIONS

**KT 320**: 2 mini-DIN connections
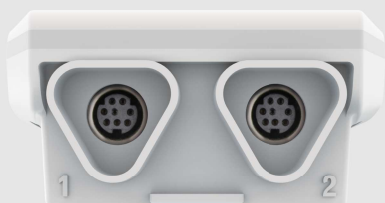
**KTT 320:** 4 mini-thermocouples connections

**PC connection**







Micro-USB connector

## RECORDER FUNCTIONS

### 5 recording modes
KISTOCK can record in 5 different ways :
- **"Immediate"** mode records values according to a predefined interval.
- **"Minimum"**, **"Maximum"** and **"Average"** record automatically the calculation of minimum, maximum or average of measured values during an interval of recording.
- **"Monitoring"** mode allows to get an accurate history report during error events to help troubleshooting, without stopping the measurement logging. To proceed this way, you just have to define :
- a record interval to be used whilst the readings are beyond the setpoints.
- a record interval for the values measured during each reading beyond the setpoints.

Furthermore, you can also let your KISTOCK record non-stop (**"loop"** recording option).

### 4 types of dataset start
Once your recording mode has been set, you can launch your dataset :
- With a delayed start (with predefined date and time)
- With the software
- With push-button
- With **"Online"** option. In this case, your datasets are directly sent, saved and displayed on your PC in real time.

### 6 types of dataset stop
You can stop your dataset :
- According to a date and time (if it was started the same way)
- According to a period
- According to a predefined number of recording points
- Once the storage capacity is full
- With **"Stop"** option of the software
- By holding **"OK"** key during 5 seconds, if this function has been previously activated by the software
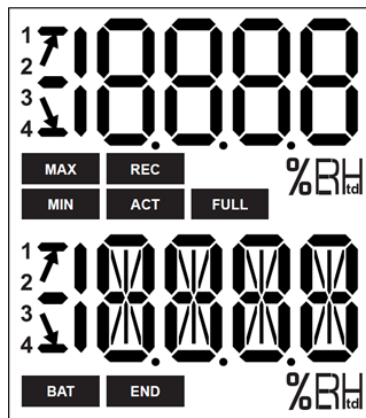
## DIMENSIONS (mm)

**KT 320**



79
35.4
113.2

**KTT 320**



79
35.4
110.2

---
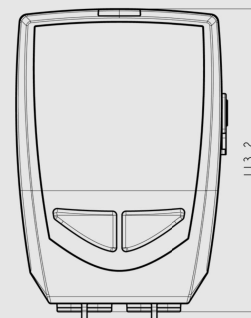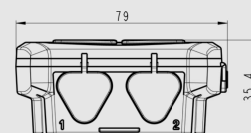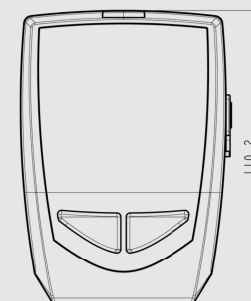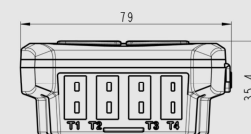
## DISPLAY



**END**   *DATASET is finished.*

**REC**   *Indicates that one value is being recorded.*
*It flashes: the DATASET did not start already.*

**FULL**   *Flashing slowly: DATASET is between 80 and 90 % of the storage capacity.*
*Flashing quickly: DATASET is between 90 and 100 % of the storage capacity.*
*Constant: storage capacity full.*

**BAT**   *Constant: indicates that the batteries have to be replaced.*

**ACT**   *Screen actualisation of measured values.*

**MIN**
**MAX**   *The displayed values are the maximum/minimum values recorded for the channels displayed.*

⤴⤵   *Indicates the alarm action type: rising or falling action.*

°C   *Temperature in °Celsius.*

°F   *Temperature in °Fahrenheit .*

%RH   *Relative humidity*

1
2
3
4   *Indicates the channel number which is measuring.*

All the probes for the **KT 320** KISTOCK have the **SMART PLUG** technology.
An automatic recognition and the adjustment parameters storage make them 100 % interchangeable.

| Reference | Description | Measuring range |
|---|---|---|
| *External or ambient thermo-hygrometric probes* | | |
| KITHA | Interchangeable hygrometry and ambient temperature probe | Hygrometry: from 0 to 100%HR Temperature: from -20 to +70°C |
| KITHP-130 | Remote interchangeable hygrometry and temperature probe | |
| KITHI-150 | Remote interchangeable hygrometry and temperature probe | Hygrometry: from 0 to 100 % HR Temperature: from -40 to +180°C |
| *General use or insertion Pt 100 temperature probes* | | |
| KIRGA-50 / KIRGA-150 | IP65 immersion probe (50 or 150 mm) | From -40 to +120°C |
| KIRAM-150 | Ambient probe 150 mm | |
| KIRPA-150 | Penetration probe IP65 | From -50 to +250°C |
| KIPI3-150-E | IP68 penetration probe with handle | |
| KITI3-100-E | IP68 penetration probe with T-handle | |
| KITBI3-100-E | IP68 penetration probe with corkscrew handle | |
| KIRV-320 | Velcro probe | From -20 to +90°C |
| KICA-320 | Smart adapter for Pt100 probe | From -200 to +600°C according to the probe |
| *Input current, voltage and impulsion cables* | | |
| KICT | Voltage input cable | 0-5 V or 0-10 V |
| KICC | Current input cable | 0-20 mA or 4-20 mA |
| KICI | Pulse input cable | Maximal voltage: 5 V Type of input: TTL frequency counting Maximal frequency: 10 kHz Maximum number of recordable points: 20 000 points |
| *Clamp-on ammeters* | | |
| KIPID-50 | Ammeter clamp from 0 to 50 A, frequency range from 40 to 5000 Hz | From 0 to 50 $A_{AC}$ |
| KIPID-100 | Ammeter clamp from 0 to 100 A, frequency range from 40 to 5000 Hz | From 1 to 100 $A_{AC}$ |
| KIPID-200 | Ammeter clamp from 0 to 200 A, frequency range from 40 to 5000 Hz | From 1 to 200 $A_{AC}$ |
| KIPID-600 | Ammeter clamp from 0 to 600 A, frequency range from 40 to 5000 Hz | From 1 to 600 $A_{AC}$ |
| *Thermocouple probes* | | |

All the thermocouple temperature probes for the **KTT 320** KISTOCK have a class 1 sensitive element as per IEC 584-1, 2 and 3 standards.
For more details about the available thermocouple probes, please see the "Thermocouple probes" datasheet.

[1] *For more details, please see the "Measuring probes for KT 320 KISTOCK" and "Thermocouple probes" datasheets.*

## SOFTWARE

- **KILOG LITE:** free software to download on the KIMO website (kimo.fr). Allows the data download (graphics and points statement) and the datalogger configuration.

- **Configuration and data processing software**
  **KILOG** software allows to configure, save and process your data in a very simple way.

- Software only: *Ref. KILOG-3-N*
- Complete set: software + 1 USB cable, *Ref. KIC-3-N*

## SAFETY LOCK WALL MOUNT WITH PADLOCK

The system allows to secure your KISTOCK datalogger on sensitive sites.

**1**        **2**        **3**

➢ Mount the safety lock support on the required place.

**1.** Present the KISTOCK datalogger on the support **starting with the inferior part**
**2.** Clip the KISTOCK on the support by falling back the superior part
**3.** Insert the padlock to ensure the safety lock function

🛈 **The padlock can be replaced by a fail-safe sealed**

🛈 **The datalogger can be placed on the screw-mount without the safety lock function**

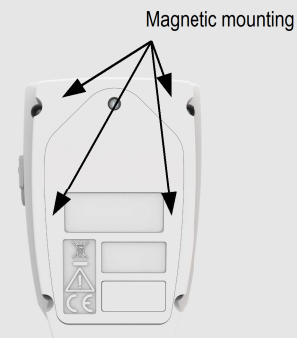➢ To remove the datalogger from the support, proceed on reverse order.

## MOUNTING

The KISTOCK class 320 have a magnetic mounting, so you can fix it easily.

Magnetic mounting

## DIMENSIONS OF THE WALL MOUNT (in mm)

**Front view**

74
85
112
25
69.5
39
Ø 4.5

**Side view**

31.5

## ACCESSORIES

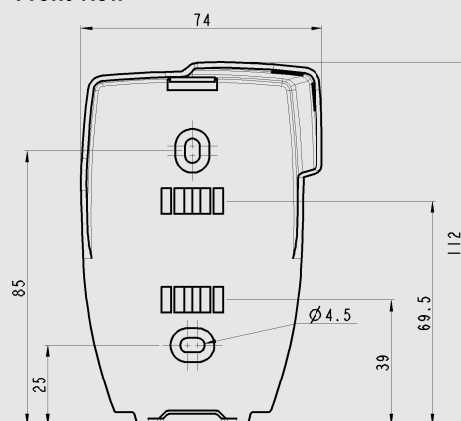| Accessories | Part numbers | Illustrations |
|---|---|---|
| **1 AA lithium 3.6 V battery  ( ⚠ 2 batteries are required for class 320 dataloggers)** | KBL-AA | |
| **Safety lock wall mount with padlock** | KAV-320 | |
| **Wired extension for class 320 KISTOCK probes** In polyurethane, 5 m length with male and female mini-DIN connectors Note: several extensions can be wired in order to obtain up to 25 m cable length | KRB-320 | |
| **Data collector** Collects up to 20 000 000 points from one or several KISTOCK directly on-site Results restitution on PC of realised datasets | KNT-320 | |
| **USB micro-USB cable** which allows to plug your KISTOCK datalogger to your PC | CK-50 | |
| **Neck size hand strap** | KDC | |

🛈 **Only the accessories supplied with the device must be used.**

## CALIBRATION

A calibration certificate is available as option in paper format.
We recommend to carry out a yearly checking.

## MAINTENANCE

Please avoid any aggressive solvent.
Please protect the device and probes from any cleaning produce containing formalin, that may be used for cleaning rooms and ducts.

## GUARANTEE PERIOD

KISTOCK dataloggers have 1-year guarantee for any manufacturing defect (return to our After-sales service required).

## PRECAUTIONS FOR USE

Please always use the device in accordance with its intended use and within parameters described in the technical features in order not to compromise the protection ensured by the device.

## REPLACE THE BATTERIES ⚠️

With 7 years* of battery life, the KISTOCK devices guarantee long-term measurements.

**To replace the batteries:**

- Unscrew the screw on the back side of the KISTOCK, on the battery hatch, with a cross-headed screwdriver.
- Remove the hatch and the old batteries.
- Insert the new batteries and respect the polarity.
- Replace the battery hatch and screw it.

*\* On the basis of 1 measurement each 15 minutes at 25°C.*

⚠️ **BE CAREFUL! Material damages can happen, so please apply the precautionary measures indicated.**

Once returned to KIMO, required waste collection will be assured in the respect of the environment in accordance to guidelines relating to WEEE.

# 大華高科股份有限公司

**www.taiwah.com.tw      info@taiwah.com.tw**

| 台北 | **TEL: (02) 2592 - 5119** | **Fax: (02) 2592- 3577** |
| --- | --- | --- |
| 台中 | **TEL: (04) 2707 - 2269** | **Fax: (04) 2707- 1799** |
| 台南 | **TEL: (06) 243 - 2338** | **Fax: (06) 243 - 2339** |

KIMO® 為 KIMO 儀器公司的註冊商標。

資料中任何商標和圖片為本公司版權所有。未經本公司書面許可不得以任何形式複製，轉印，發行或儲存資料中所包含的訊息。本資料如有變更，恕不另行通知。