

LU series VERTICAL LIQUID COLUMN MANOMETERS

Pressure / Depression


KEY POINTS

The LU range of vertical liquid column manometers, developed and manufactured by KIMO, are mainly for measuring variations of pressure, depression or differential pressure of air or gas within measurement ranges which vary according to the type of manometric liquid used :

AWS 10, VOLT 1S or **MERCURY**.

(See table below)

- "U"-shaped column for measuring consecutively positive and negative pressures
- Measurement by addition of values read on each column
- Zero adjustment by moving the slide strip
- For fixed use regardless of the manometric liquid used
- For portable use with the LU model using VOLT 1S liquid
- Supplied with a white PVC support, 2 screws and 2 rawlplugs, two 487 connectors and bottle of liquid

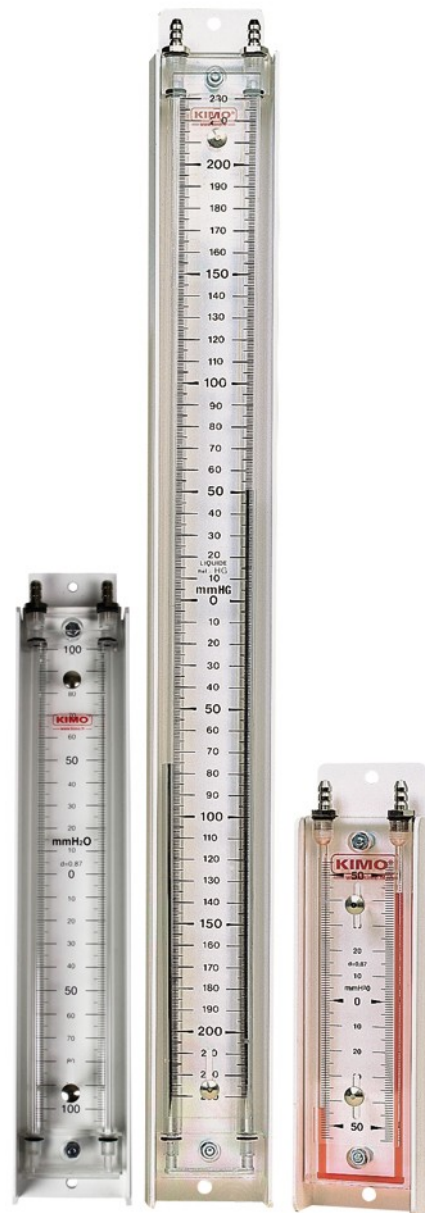

MEASURING RANGE


			LU 100	LU 200	LU 400
Liquide AWS 10	Measuring range	mm CE	50 - 0 - 50	100 - 0 - 100	200 - 0 - 200
		mbar	5 - 0 - 5	10 - 0 - 10	20 - 0 - 20
Resolution : 1 mm CE or 0.5 mbar					
Liquide VOLT 1S	Measuring range	mm CE	110 - 0 - 110	220 - 0 - 220	430 - 0 - 430
		mbar	11 - 0 - 11	22 - 0 - 22	43 - 0 - 43
Résolution : 5 mm CE or 1 mbar					
Mercure	Measuring range	mm HG	50 - 0 - 50	120 - 0 - 120	240 - 0 - 240
		mbar	80 - 0 - 80	160 - 0 - 160	310 - 0 - 310
Resolution : 1 mm HG or 10 mbar					

TECHNICAL FEATURES

Recommended range of use	From +5 to +30°C
Possible range of use	From -30 to +60°C
Maximum static pressure	6 bars
Manometer body	Transparent Altuglas of 15 mm thick
Liquid column	Ø 4 mm tube in extruded Altuglas.
Graduated slide strip	Altuglas transparent. Section 40 X 2 mm
Zero adjustment	By moving the graduated slide strip, travel 10 mm. Fixed via milled, nickel-plated brass screw
Manometric liquid	AWS 10 liquid, density 0.86, VOLT 1S liquid, density 1.86 or mercury, density 13.545
Connection	Ø 5x8 mm semi-rigid crystal tube on Ø 6.2 nickel-plated brass ribbed connectors (for manometers using AWS 10 or VOLT 1S liquid) or in Delrin (for mercury manometer), 1/8 gas thread
Wall mounting	With or without white PVC support.

ENCOMBREMENT

REF.	LU 100	LU 200	LU 400
a	57 mm	57 mm	57 mm
b	207 mm	324 mm	558 mm
c	25 mm	25 mm	25 mm
d	50 mm	50 mm	50 mm
e	169 mm	286 mm	520 mm
Distance between tubes	193 mm	310 mm	544 mm
Weight	260 g	400 g	730 g

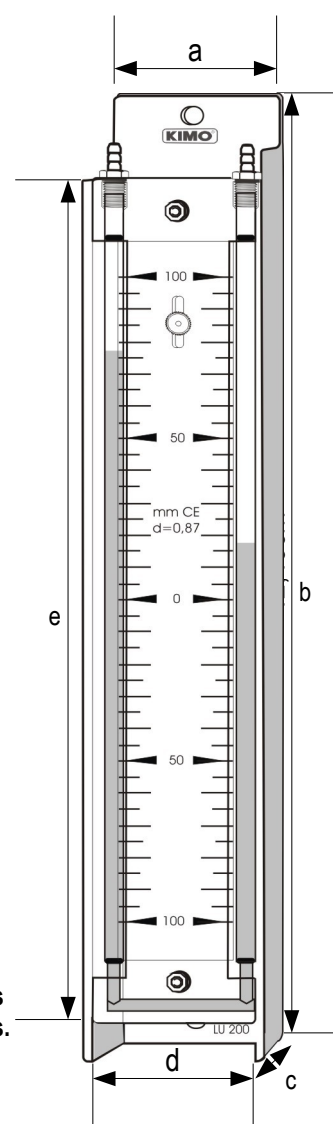

MOUNTING

- Mount** the manometer on a wall or partition wall with two maximum Ø 5 screws.
- Unscrew** the left-hand connector and **slowly pour the manometric liquid** to zero point on the graduation
- Remount** the connector without overtightening.
- Connect** the manometer with the Ø 5x8 mm crystal tube to the pressure or depression source to be checked.

REMARQUES :

- For a **pressure** measurement.....Connect the crystal tube to **one of the two connectors**
 For a **depression** measurement.....Connect the crystal tube to **one of the two connectors.**
 For a **differential pressure** measurement.....Connect **both tubes to both connectors**

大華高科股份有限公司

www.taiwah.com.tw info@taiwah.com.tw

台北 TEL: (02) 2592 - 5119 Fax: (02) 2592- 3577

台中 TEL: (04) 2707 - 2269 Fax: (04) 2707- 1799

台南 TEL: (06) 243 - 2338 Fax: (06) 243 - 2339

KIMO® 為 KIMO 儀器公司的註冊商標。

資料中任何商標和圖片為本公司版權所有。未經本公司書面許可不得以任何形式複製、轉印、發行或儲存資料中所包含的訊息。本資料如有變更，恕不另行通知。